



Installation Instructions

v1.0 2025.09.

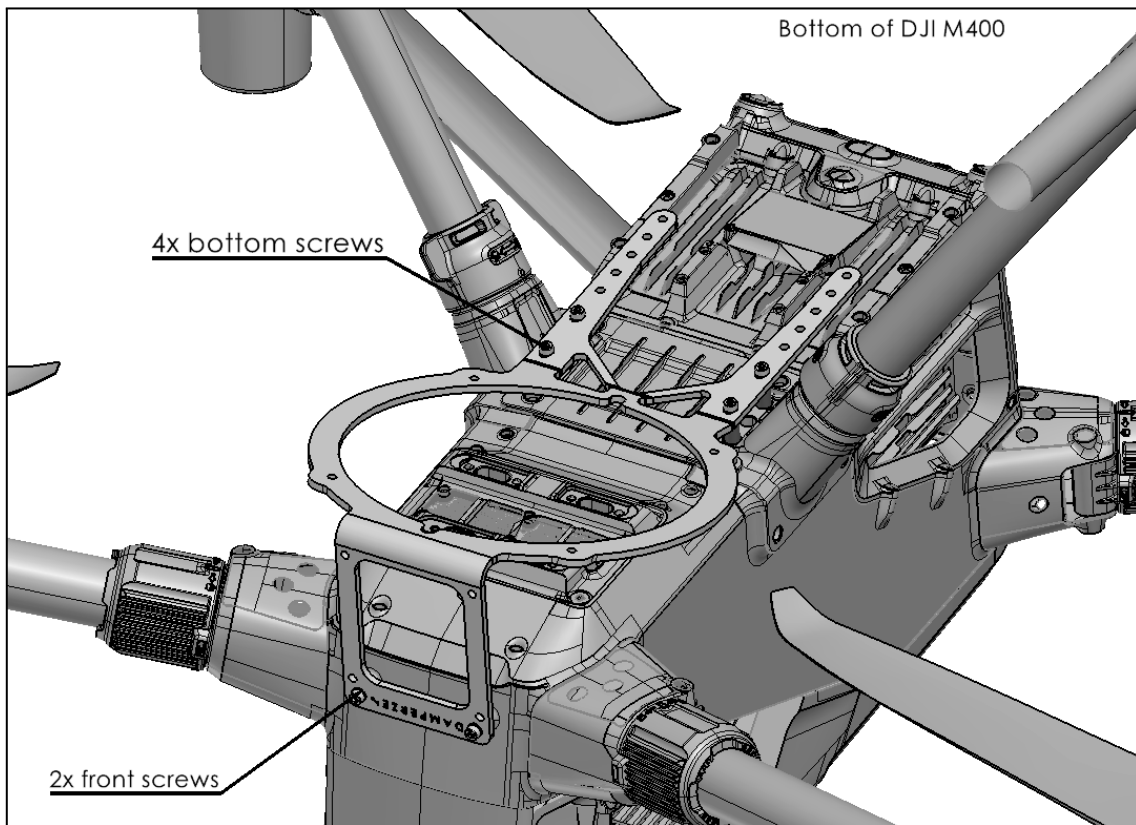

1. Check that the spacers can move freely on the unthreaded section of the partially threaded mounting screws.

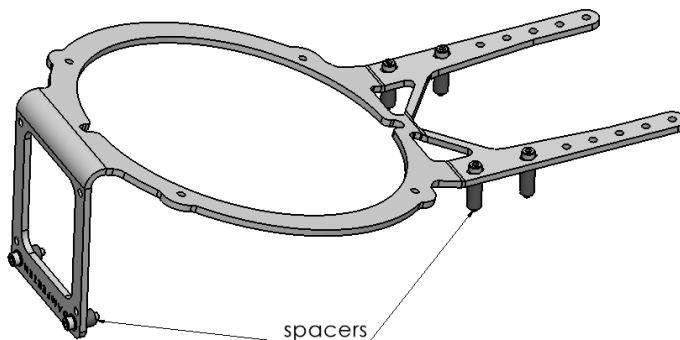

2. Place the mounting plate on the underside of the drone in the position shown in the image above.
3. Insert the four bottom screws by hand, but do not fully tighten them.
4. Insert the two front screws by hand, but do not fully tighten them.
5. Ensure that the mounting plate and spacers are properly aligned and seated in the correct position.
6. Tighten the two front screws securely.
7. Tighten the four bottom screws securely.